Fte®
maximal

MAX S700 CI+

USER'S MANUAL



Fte®

MAX S700 CI+
ENGLISH

USER'S MANUAL



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to "dangerous voltage" and to prevent from a risk of electric shock.

CAUTION

RISK OF ELEKTRIC SHOCK DO NOT OPEN

Warning:
To reduce the risk of electric shock, don't open the cabinet. Refer servicing to qualified personnel only.



The exclamation point within an equilateral triangle is intended to alert the user to important operating and maintenance (servicing).

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Warning:
-The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not place naked flame sources, such as lighted candles on the apparatus; otherwise, there is the danger of fire.
- The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit. If you are not sure of the type of power supply (for example: 120 or 230V) to your home, consult your local dealer or local power company.
- Do not open the cabinet or touch any parts in the inner mechanism. Consult your local dealer for technical service if the opening is required.
- The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- Take attention to the environmental aspects of battery disposal. The battery of remote control should not be exposed excessive heat such as sunshine, fire or the like.
- Maintenance man must use the appointed screw in the rear plate.
- Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
- Ensure that the ventilation is not impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- Use the apparatus only in moderate climates (not in tropical climates).
- Do not open the cabinet to avoid the unit direct exposure to radiation.

Unit Cleaning: After the unit power is turned off, you can clean the cabinet, panel and remote control with a soft cloth lightly moistened with a mild detergent solution.

Attachments: Never add any attachments and/or equipment without the manufacturer consent; as such additions may result in the risk of fire, electric shock or other personal injury.

Locating: Slots and openings in the cabinet are provided for ventilation to protect it from overheating. Do not block these openings or allow them to be blocked by placing the STB on a bed, sofa or other similar surface, nor should it be placed over a radiator or heat register.

Power-Cord Protection: Place the power-supply cord out of the way, where it will not be walked on. Please take special attentions to cords at plugs, convenience receptacles and the point where they exit from the unit.

Object and Liquid Entry: Never put objects of any kind into this STB through openings, as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill any liquid on the STB.

Note: Moisture may be formed inside the unit in the following conditions:
When the unit is suddenly moved from a cold environment or an air-condition room to a warm place.
Immediately after a heater has been turned on.
In a steamy or very humid room.
If the moisture forms inside the unit, it may not operate properly. To correct this problem, turn on the power and wait about two hours for the moisture to evaporate.

Parts Replacement: When the unit parts need to be replaced, user should make sure the service technician use the replacement parts specified by the manufacturer or having the same characteristics as the original part. Unauthorized replacement may put the unit in the risk of fire, electric shock or other hazards.

Safety Check: After all the maintenances and repairs are done, user is required to request the service technician to conduct the overall safety check to ensure the machine is in the proper condition.

 © FTEmaximal

Note: This user's manual is adapted to the version v.1.114.
In order to download the complete user's guide and get more information about receivers, please visit the website http://receivers.ftemaximal.com.

The coaxial cable, with satellite signal, must be connected to the "IF IN" connector. The "TV SCART" or "HDMI" connectors must be connector to the TV set.
Depending on the type of installation, the receiver should be connected and configured following next examples.





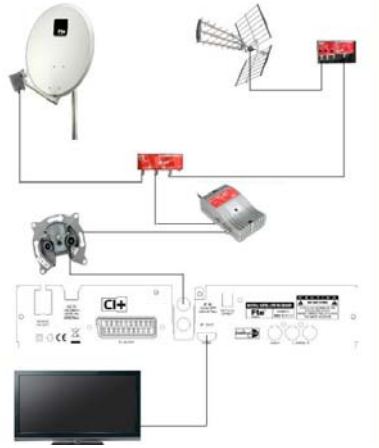



 © FTEmaximal

Quick setup



The receiver includes an installation assistant (Quick Setup) that will help you to setup the different parameters.
When the receiver is turned on at first time (using the button at the rear panel of the receiver), the next menu is shown on the TV.

NOTE: Basic operation hints display on the sidebar and lower bar.
- OK : Press [OK] to enter into the menu or choose the item.
- ←OK→ : Press [◄/►] to change the option; Press [OK] to popup the options, and press [▲/▼] to select the option, then press OK to confirm your selection.
- 0...9, ← →: Press 0-9 button to enter the specific number; Press [◄/►] to change one by one.

Language settings



Enter the menu and you will see the Configuration of languages:
- OSD language: The selection of languages include: English , German, French, Spanish, Italian, Portuguese.
- Preferred audio language: some channels offer more than one audio language. If a channel offers the same audio language as the "Preferred audio language" you set the system will play this audio language as default. If the channel does not offer this audio language then the system will compare the offered languages with the second audio language.
- Second audio language: If the channel has no audio language that corresponds with "First Audio" but with "Second Audio" the system will play the second audio language as default. If no audio language corresponds with the "Second Audio" then the default language of the current channel will be played instead.
- Preferred subtitle language: You can choose the predetermined subtitles language.
- Second subtitle language: You can choose the secondary subtitles language.

Time settings

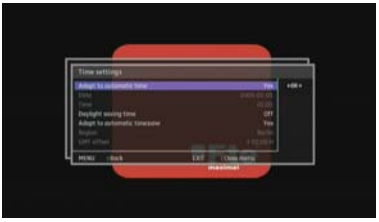

Enter the menu and set up the time.
- Adapt to automatic time: Choose Yes to use the default time, and No to set the time manually.
- Date: set the date.
- Time: set the time.
- Daylight saving time: Select On at daylight saving time;
- Adapt to automatic timezone: Choose Yes to use the default timezone; Choose No to set the timezone manually

 © FTEmaximal

Antenna and program setup

Enter the Guided installation or enter the sub-menu to change the settings manually.



Type of tuner installation
Select the same way of your tuner and press [OK] to confirm the setting.

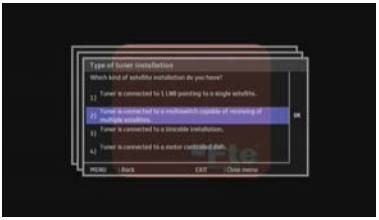

Satellite list editor
- Select satellite: Select the satellite in the satellite list.
- Name: Edit the name of the satellite.
- Orb.pos[Deg]: Edit the degree of Orb.
- West/east : choose west or east.
- Press [Red] button to remove the current satellite.

Press [Green] button to add a new satellite.



Tuner configuration menu
- Choose control method:

You can choose the type of your tuner: DiSEqC 1.0, DiSEqC 1.1 SMATV, DiSEqC 1.1 DTH , DiSEqC 1.2, Toneburst and 22KHz, 14/18V.
- Select satellite: choose the satellite you are using now.
- If your receiver is connected to the LNB directly then you need to set the LNB Power to "On". If your receiver is connected to a multi switch (SMATV signal distribution system) then it may be that you don't need to provide the power to the LNB. But since this is depending on the kind of installed distribution system we recommend you to contact your installer or to refer to the user manual of this system to get the correct information.You also just can change this setting and check if you still can receive the channels. If the LNB Power is off and you still can see all channels then we recommend this setting.
- Select DiSEqC ID: choose the ID of your DiSEqC
- LNB high osc. Freq. / LNB low osc. Freq. : Set the LNB freq manually.

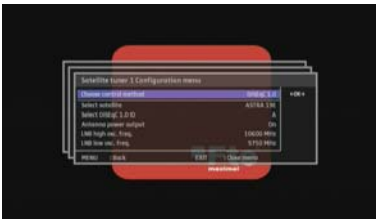

Transponder list editor
- Select satellite position: choose the satellite you are using.
- Select transponder: choose the transponder from the list.
- Frequency: edit the frequency.
- Symbol rate: edit the symbol rate
- Modulation: Change the modulation to QPSK, QPSK S2 or 8 PSK
- Polarization: Change the polarization to Horizontal or Vertical.
- Press [Red] to remove the current transponder
  Press [Green] to add new transponder

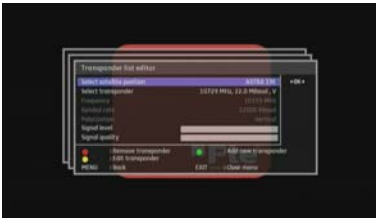

Satellite Scan menu
- Select satellite: choose the satellite you are using now.
- Scan method: Select the scan method to be Channel or all.
- Kind of service: choose the service you are going to scan: All services



Service list editor
You can edit your service list follow the operation guide in the underside window.
Press the specific buttons on your remote control unit to do the operation.



 © FTEmaximal

Main menu

- File viewer

- Media viewer *

- Select picture
- Select music
- Leave media viewer

- Recordings *

- Timer programming

- Mosaic preview

- Stream selection

- Subtitle track
- Audio track
- Digital output

- System setup

- Language setttings
- Time settings
- Antenna and program setup
- Audio/Video setup
- General settings
- CI Settings
- OSD Setup
- Mass-storage utilities
- Password and parental settings
- Software update
- Restore factory settings

- Information

**** This function will only be available in models with PVR ready functionability.***

 © FTEmaximal

Index

1. Panel & remote control description 9
1.1. Front panel description 9
1.2. Rear panel description 9
1.3. Remote control description 10

2. Basic operation on remote control unit. 11
2.1. Standby Mode 11
2.2. Mute 11
2.3. Audio 11
2.4. TV/Radio 11
2.5. SUB 11
2.6. TXT 11
2.7. FORMAT 11
2.8. Channel Number 11
2.9. PGUP / PGDN 11
2.10. FAV +/- 11
2.11. FAV 12
2.12. EPG 12
2.13. Up / down (▲/▼) 12
2.14. Left / Right (◄/►) 12
2.15. Channel list 13
2.16. MENU 13
2.17. EXIT 13
2.18. PAUSE 13
2.19. ZOOM 14
2.20. INFO 14
2.21. PVR LIST * 14
2.22. T.S * 14
2.23. STOP (■) * 14
2.24. Fast recording (●) * 14
2.25. Forward / rewind (◄◄|►►) * 15
2.26. Play / Pause (►II) * 15
2.27. I◄◄/►►I * 15

 © FTEmaximal

3. Main menu 16
3.1. File viewer 16
3.1.1. Play Picture 17
3.1.2. Play music 17
3.1.3. Play recorded service * 17
3.1.4. Software 17
3.2. Media viewer 17
3.2.1. Select picture menu 18
3.2.2. Select music menu 18
3.3. Recordings * 18
3.4. Time programming 18
3.4.1. Edit timer menu, ... 19
3.5. Mosaic Preview 19
3.6. Stream selection 19
3.7. System setup. 19
3.7.1. Language settings 19
3.7.2. Time settings 19
3.7.3. Antenna and program setup 19
3.7.4. Audio/video setup 20
3.7.5. CI settings 21
3.7.6. OSD setup 23
3.7.7. Mass storage utilities 23
3.7.8. Password and parental settings 23
3.7.9. Software update 23
3.7.10. Restore factory settings… 24
3.8. Information 24

4. Technical Specification 25

5. Conformity declaration 26

 © FTEmaximal

1. Panel & remote control description

1.1. Front panel description

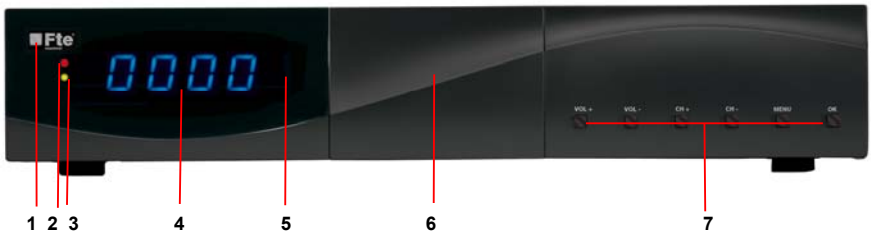

1. POWER: Switches the receiver on, or enters standby mode. To completely switch off the receiver, you have to use the switch on the back of the receiver.
2. STAND BY LED: Shows if the receiver is in Standby mode
3. LOCK LED: Indicates a sufficient signal level at the IF IN input.
4. DISPLAY: 4 Digits to display the program numbers.
5. IR SENSOR: Reception sensor for the IR remote control signals.
6. FRONT COVER: Opening the front cover, you will access to the Conditional Access system and to the USB connector.
7. BUTTONS: These buttons allow controlling the main functions of the receiver, and provide the same functionality as the remote control ones.

1.2. Rear panel description

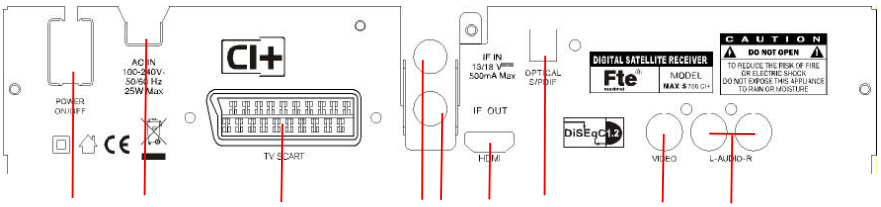

1. POWER ON/OFF: Allows to completely switching off the receiver
2. AC IN: Mains input cable.
3. TV SCART: Output SCART for the connection to a TV set.
4. IF IN: Satellite input.
5. IF OUT: Satellite output for cascading to other devices.
Note: The operation of another receiver at the same time is only possible with limited channel
selection.
6. HDMI: HDMI output for connecting to a TV
7. S/PIDF: Optical output for digital audio (AC3).
8. VIDEO: Video output for external monitor, TFT or video beamer.
9. AUDIO: Audio output for home audio systems.

 © FTEmaximal

1.3. Remote control description

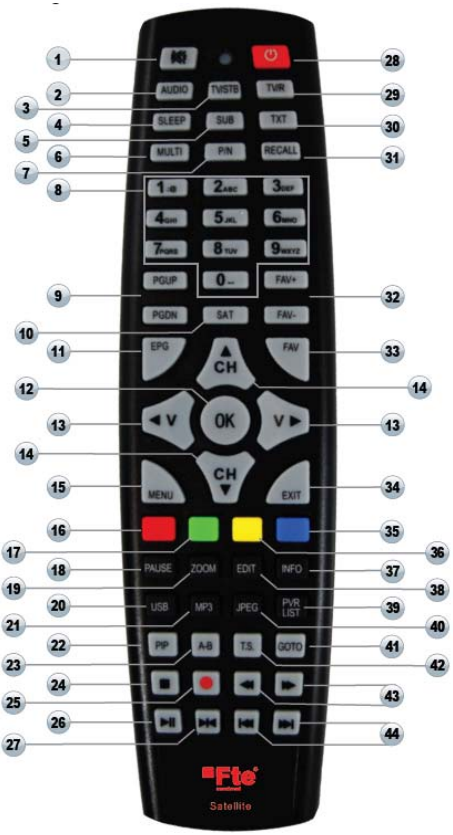

1. MUTE: Switches audio on and off.
2. AUDIO: Opens audio menu.
3. TV/STB: *Without function*.
4. SLEEP: Starts the sleep timer to turn off the receiver automatically. Press repeadtedly to change the timer.
5. SUB: Switches subtitle on and off..
6. MULTI: *Without function.*
7. P/N: Switches between PAL and NTSC.
8. 0~9: For direct typing values and names
9. PG UP / DN: Moves cursor in block steps
10. SAT: *Without function.*
11. EPG: Shows the EPG information.
12. OK: Confirms selections or opens channel list..
13. ◄V / V►: Adjusts audio volume or controls the cursor in Menus.
14. ▲CH/CH▼: Changes channel up and down.
15. MENU: Opens the main menu.
16. RED: Opens the Multi-feed menu.
17. GREEN: Opens the options available in the menu
18. PAUSE: Pauses the playback or starts the timeshift
19. ZOOM: Zoom function
20. USB: Opens directly the "File viewer" menu
21. MP3: Opens directly the "Media viewer" menu
22. PIP: OPT function in menu.
23. A-B: Screenshot function (with HDD connected to USB).
24. STOP: Stop button for recording *
25. REC: Quick start for recording. *
26. ►||: Start / Stop button for recording. *
27. ►|◄: *Without function*.
28. ON/OFF: Switches receiver ON or in stand-by-mode.
29. TV/R: Switches between TV and Radio channels.
30. TXT: Opens and closes teletext.
31. RECALL: Watch the last viewed channel.
32. FAV +/-: Moves favourite channel up and down..
33. FAV: Opens favourite channel list.
34. EXIT: Exit menus or stop operations.
35. BLUE: Selects picture format.
36. YELLOW: Opens "audio/video setup" menu.
37. INFO: Shows channel information with signal bar.
38. EDIT: Edit channels.
39. PVR-List: Opens "Playbacks list" menu. *
40. JPEG: Opens directly the "Media viewer" menu (jpeg)
41. GOTO: *Without function*.
42. T.S.: Starts and stops the timeshift. *
43. << / >>: Forward and rewind buttons, pressing repeatedly change the speed. *
44. |<< / >>|: Switch between marker position (each chapter). *

**** This function will only be available in models with PVR ready functionability.***

 © FTEmaximal

2. Basic operation on remote control unit.

2.1. Standby Mode

1. Press [Power] button to switch from TV/radio mode to standby mode
2. In standby mode press [Power] button again to switch back to TV/radio mode. The last active channel will be showed.
3. To switch off the STB complete press the main power button.

2.2. Mute

1. Press the [Mute] button to mute the sound. On the screen an icon will be displayed to indicate the muted sound.
2. Press the [Mute] button again to restore the sound.

2.3. Audio

In TV or Radio mode, press [AUDIO] button to open the Stream Selection menu window. Please read 3.6 for reference.

2.4. TV/Radio

1. In TV mode, press [TV/R] to switch to Radio mode.
2. In Radio mode press [TV/R] again to switch back to TV mode.
3. Press [OK] button, then press Red button to switch to TV list or press Green button to switch to Radio list in the menus.



2.5. SUB

Press [SUB] to enable the subtitle and press [SUB] again to disable the subtitle.

2.6. TXT

Press [TXT] button in TV mode to open the teletext page. This service is depending on the support of the channel provider.

If the channel does not support teletext information, it will only show "P100" on the screen.



2.7. FORMAT

In TV or radio mode, press [BLUE] button to display Mode is used to switch the display mode.

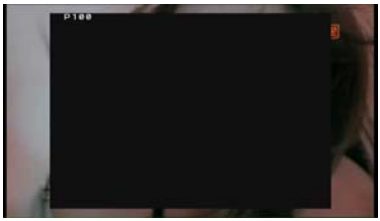

2.8. Channel Number

In TV mode you can enter the channel number directly with your remote control unit and confirm the number with the OK button to change to the desired channel.

2.9. PGUP / PGDN

In TV mode, press [PGUP / PGDN] to switch directly between channels.

2.10. FAV +/-

1. In full screen, press [FAV +/-] keys can switch the favorite channels in current satellite channels list directly.
2. The sequence of the favourite channels will regroup after the favourite group is set up.

 © FTEmaximal

2.11. FAV

In TV mode press the [FAV] button to display the Favorite Group window on the screen as the picture beside shows. In the Favorite Group window you can select the desired favorite channel with [CH▲/▼] and confirm it with [OK] to switch to it. In bigger groups you can navigate with [PGUP/ PGDN].
Press [Exit] to close the Favorite Group window.

2.12. EPG

The STB supports Electronic Program Guides (EPG) to give you information about the actual programs of certain channels like event name, subtitle, description, start and finish time.
This feature is depending on the service of the channel provider.
Press [EPG] to open the EPG window.



1. You can move the highlighted channel with [▲/▼] and preview the highlighted program in the preview window. with [◄/►] and display the event's detailed description.



2. To close the EPG menu press [Exit / Menu]. Press [REC] button to set timer on selected service.

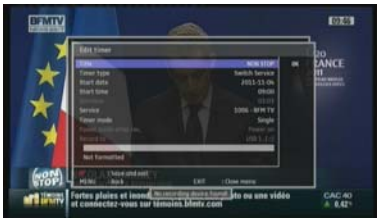

3. Press [Green] button to enter in to the previous day; press [Yellow] button to go to Next day. Press [OK] to select service; press [INFO] to see extended info; press [REC] to set timer on selected service.



2.13. Up / down (▲/▼)

In TV/Radio mode press [▲/▼] to change channel. In Main menu, press [▲/▼] to move and select item. When you want to change the option, you can also press [OK] to pop up the option list, press [▲/▼] to select the option and then press [OK] to confirm your selection.

2.14. Left / Right (◄/►)

In TV/Radio mode, press [◄/►] to adjust volume. In Main menu, press [◄/►] to change the option directly, and you do not need to press [OK] to confirm.

 © FTEmaximal

2.15. Channel list

In TV mode press [OK] button to open the TV service window.

1. Press the [Red] button to display TV services.
   Press [▲/▼] button to select TV service and press [OK] to change to your selected service.



2. Press [Green] display Radio services
   Press [▲/▼] button to select Radio service and press [OK] to change to your selected service.



3. Press [Yellow] button to open the next favourite list, Press [▲/▼] button to select Favourite service and press [OK] to change to your selected service.



4. Press [Blue] button to sort the list of files. Options:
   1. "123": Sorting in numerical order (increasing).
   2. "321": Sorting in numerical order (decreasing).
   3. Name "ABC": Sorting in Alphabetical order (increasing).
   4. Name "CBA": Sorting in Alphabetical order (decreasing).



2.16. MENU

1. Press [Menu] button to pop up the main menu in TV/Radio mode.
2. Press [Menu] button to turn back to the previous menu.



2.17. EXIT

1. Press [Exit] button to exit the all menu.
2. Press [Exit] button to exit the option list.

2.18. PAUSE

In playing mode, press [PAUSE], the video including the sound will be paused
Press [PAUSE] again, the video will continue playing from where it was paused.

 © FTEmaximal

2.19. ZOOM



1. The [Zoom] key allows you to magnify a certain area on the images and the current screen will show
2. Press [Zoom] key again, the image will enlarge rotate as x1, x2, x4, x6, x8, x12, x16.
3. In "x2 ~ x16" image, using [CH▲/▼ / VOL◄/►] keys to move the image center area you want to see.
4. In zoom mode, press [Exit] to close "Zoom" window.

2.20. INFO

1. In TV mode, press [INFO] button can open information screen, in the window shows the parameters of current channel. Please read 3.8 for reference.
2. In File Viewer mode and Media Viewer mode, press [INFO] button to pop up the information of the picture or music you are playing at the moment.

2.21. PVR LIST *



In TV mode, press [PVR LIST] button to access directly to the "Record List" menu.

2.22. T.S *

TMS function is working the same way as recording function.

2.23. STOP (■) *



When you play a recorded program, press [■] button will stop the recorded channel playing and back to the Record Management menu. When you are recording a program, press [■] button you will be asked to "stop recording?" menu.

2.24. Fast recording (●) *



In TV mode, press [●] button you will see "Recording started" tip.

1. You can record 2 services at once, if there is no recording service, the REC1 and REC2 will appear blank.



**** This function will only be available in models with PVR ready functionality.***

 © FTEmaximal

2. If some services are being recorded, it will show the service name on REC1 and REC2.

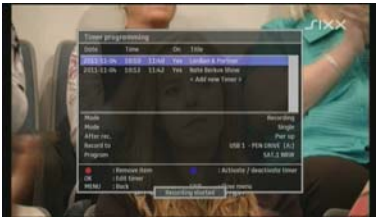

2.25. Forward / rewind (◄◄|►►) *

When you play a recorded channel, press [◄◄] button to back the program fast and Press [►►] to fast forward the program.Selection: 2x, 4x, 8x, 16×, 64× speed.



2.26. Play / Pause (►II) *

When you play a current or recorded program, press [►II] will stop the program, press [►II] again will play the program continually.

2.27. I◄◄/►►I *

Press [**I◄◄/►►I**] button when you play a marked program, the screen will jump to the next mark point.

**** This function will only be available in models with PVR ready functionability.***

 © FTEmaximal

3. Main menu



Press [Menu] to enter into the main menu. Press [▲/▼] to select the sub menu, Press [OK] to enter the selected sub-menu.

3.1. File viewer



1. In File viewer menu, all of the connected storage device can be seen. Select the storage device and press [OK] to enter into the device.



2. Press [▲/▼] to select the file.
   After the file has been selected, press [OK] to play the file, whether it can be played depends on whether the format can be supported by the software.
   The software supports to show the Recorded service, software, pictures and music.
   When you select one file, the basic information of the file will appear on the right side window such as the size of the file, software edition number, time of the recorded service, information of the picture and music .



3. Press [Yellow] button to pop up the Options: new folder, copy, move, rename, delete
   Choose New folder to create a new folder in the current folder.

Choose Copy or Move when one file is selected. Open the aim folder, press [Green] button to finish the Copy or Move.



 © FTEmaximal

3.1.1. Play Picture

1. Select the specific picture file (jpg, bmp and png format are supported). The dimension and size displays on the top of the preview picture.
2. Press [OK] to open the picture and play the picture in full screen.
3. Press [►II] button to pop up the slideshow scope menu.

   Press [▲/▼] to select the scope you need and Press [OK] to confirm the selection and start slideshow.
   Show this folder (12 pictures): play all the pictures slideshow in the folder, not include the child folder.
   Show this folder, shuffle: play all the pictures in the folder, and operate manually. Child folder will not be played.
   Show incl. subfolders (12): play all the pictures in the selected folder including pictures in the child folder
   Show incl. subfolders, shuffle: Only play the pictures including the child folder





4. Press [INFO] button to show or hide the picture information menu.
5. Press [MENU] button to turn back to File viewer menu
6. Press [►►] button to play the next picture manually
7. Press [◄◄] button to play the previous picture manually
8. Press [Red] button to Zoom in (100%, 200%,, 300%, 400%, 500%, 600%, 700%,800%)
9. Press [Green] button to Zoom out (100%, 200%,, 300%, 400%, 500%, 600%, 700%,800%)
10. Press [Blue] button to Rotate (0°, 90°, 180°, 270°)

3.1.2. Play music

Select a music file and press [OK] button to enter into Music Box

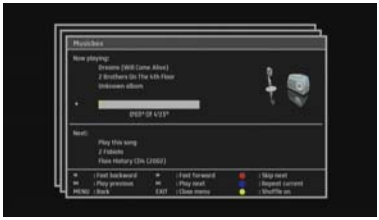

1. Press [Menu] button to turn back to previous menu.
2. Press [Exit] button to exit the menu
3. Press [►] button to skip the current music.
4. Press [Red] button to skip the next music
5. Press [Blue] button to repeat the current music
6. Press [Yellow] button to play random.
7. Press [►►] button to fast backward.
8. Press [◄◄] button to fast forward.
9. Press [►►I] button to play next song.
10. Press [I◄◄] button to play previous song.

3.1.3. Play recorded service *

Select recorded service and press [OK] to play. During the playback, any operation on TV/Radio service list is unavailable.

3.1.4. Software

Updating software information is visible when the software item is selected.

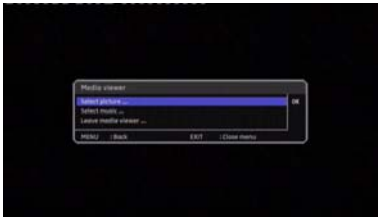

3.2. Media viewer

1. Select picture
2. Select music
3. Leave Media viewer menu

**** This function will only be available in models with PVR ready functionability.***

 © FTEmaximal

3.2.1. Select picture menu

Select the picture file and press [OK] to play the picture.



1. Press [INFO] to pop up the operation menu.
2. Press [Blue] button to play the next picture.
3. Press [Yellow] button to play the previous picture.
4. Press [Red] button to start the slideshow.
5. Press [Green] button to play the shuffle on.
6. Press [►►I] button to Zoom in.
7. Press [I◄◄] button to Zoom out.
8. Press [REC] button to rotate.



3.2.2. Select music menu



Press [OK] button to play the selected music.
Press [INFO] button pop up the background picture information.
Press [INFO] button twice to pop up the background picture information and music information.
Press [►►] button to play the next title.
Press [◄◄] button to play the previous title.
Press [►II] button to pause playback.
Press [■] button to stop playback.

3.3. Recordings *



You can check the Playback list of what you have recorded in this menu.
Press [OK] to playback the recorded programme;
Press [Yellow] to rename the programme;
Press [Red] to delete the recorded programme;
Press [EXIT] to exit the menu.
Press [Menu] button to turn back to previous menu.

3.4. Time programming



In timer programming list, select item and
1. Press [Red] to remove the item
2. Press [Blue] to activate or deactivate timer
3. Press [OK] to edit timer
4. Press [EXIT] to exit the menu.
5. Press [Menu] button to turn back to previous menu.

**** This function will only be available in models with PVR ready functionability.***

 © FTEmaximal

3.4.1. Edit timer menu,



1. Title: Edit the title.
2. Timer type: Edit timer type (Recording, Switch Service, Power Down).
3. Start date: Edit timer start date.
4. Start time: Edit timer start time.
5. Duration: Edit timer duration.
6. Select the service.
7. Edit timer mode: Single, weekdays, weekly weekends daily.
8. Edit power mode after recording: power on/ standby.
9. Select the device you are going to record to.

Press [REC] button to save the settings and exit the menu.
Press [Menu] button to turn back to previous menu.
Press [EXIT] button to exit all the menu.

3.5. Mosaic Preview



You can check service preview using multi-picture mode in this menu. The highlighted one is the current channel.
Press [▲/▼/◄/►] to select the preview channel and press [OK] to confirm your selection.

3.6. Stream selection





(Note: you can also press [Audio] or [Opt] to enter this menu.)
1. Subtitle track: Select your subtitle track.
2. Digital output: Select your digital output
3. If the service supports AC3, you can choose the Audio track to be [AC-3] option.

3.7. System setup.

3.7.1. Language settings

Please, read the quick setup chapter.

3.7.2. Time settings

Please, read the quick setup chapter.

3.7.3. Antenna and program setup

Please, read the quick setup chapter.

 © FTEmaximal

3.7.4. Audio/video setup

1. Display format: switch the screen aspect ratio mode. You can select the needed mode from Auto / 4:3 / 16:9 with [◄/►].

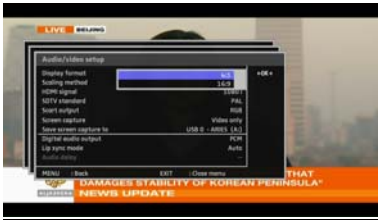

2. Scaling method:
   You can select pillar/letterbox, fullscreen (zoom), fullscreen (CCO).

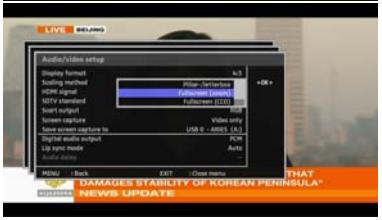

3. HDMI signal:
   Options are 1080i, 720P, 480i, 576i.

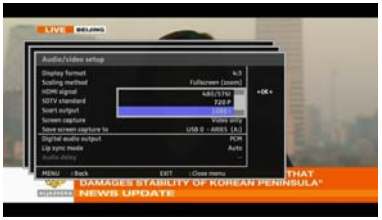

4. SDTV standard:
   Options are PAL, NTSC, SECAM.

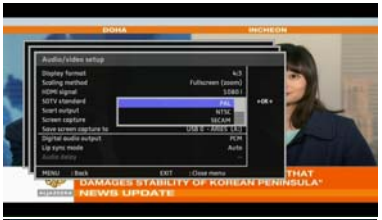

5. Scart output
   You can select CVBS+YPbPr, Y/C to choose scart output



6. Screen capture
   You can select Video only to only capture Video, or select Video + OSD to capture Video and OSD on your screen.



7. Save screen capture to choose the device for the saved capture picture.
8. Digital audio output
   Choose PCM or Original for digital audio output
9. Lip sync mode
   Choose auto mode to play the audio auto or choose manual to adjust audio delay manually.

 © FTEmaximal

3.7.5. CI settings

1. You can see the CI status in this menu, when there is no CI module, it will display "No module"



2. After you insert CI module into the Slot, CI+ matching will start automatically.

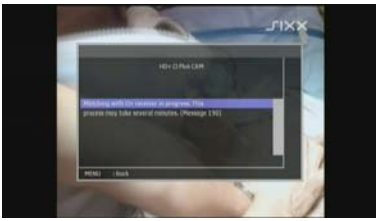

3. Then the status will appear to be Module Inserted. Please press [OK] to set the configuration of you CI slot.



4. Pin-Code modification: Set the pin code of the CI module.



5. If there is no Smartcard inserted into the module. It will show the information like the right picture.

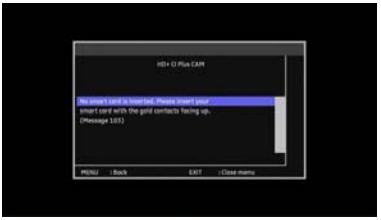

When the Smart Card is inserted, you can check the Smartcard information.

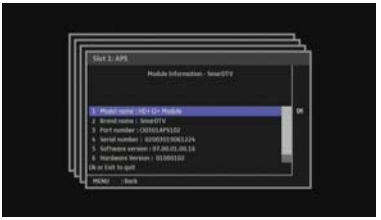

 © FTEmaximal

Then the services and channels that CI+ card supports are available.





6. The language of CI module is available in English and German.

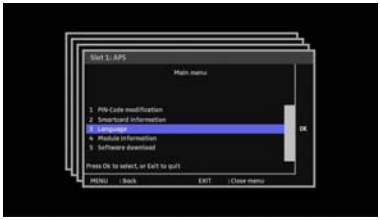



7. The module information.

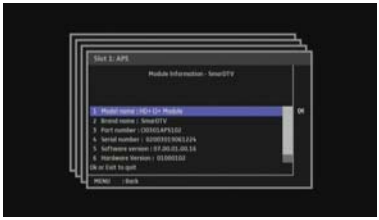

8. CI+ software download is available.



 © FTEmaximal

3.7.6. OSD setup

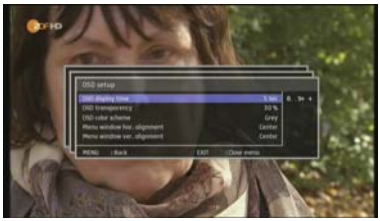

1. OSD display time:
   Enter the OSD display time using numbers or press [◄/►] to increase or decrease. The max display time is 30 seconds.
2. OSD transparency:
   Press [◄/►] to edit the OSD transparency.
3. OSD color scheme:
   Press [◄/►] to edit the OSD color scheme (Red, Grey, Blue and Green).
4. Menu window hor. Alignment
   Select the horizon location of OSD to be left/center/right.
5. Menu window ver. Alignment
   Select the vertical location of OSD to be top/center/bottom

3.7.7. Mass storage utilities



View the mass storage utilities information.

1. Select storage device
2. Your storage device information.
3. Format the selected device. (Only support FAT32 format right moment)
4. Rename the selected device.
5. Set the PVR jump time as you need. Forward and backward are both available.

3.7.8. Password and parental settings



1. Set the menu lock to be Off to unlock the setup menu, set the lock to be On to lock the setup menu

2. Change the password

3.7.9. Software update



1. Update from file:
   Press [OK] button to enter into the USB disk and find out the software updates
2. Update by OTA.
3. Revert to previous version
4. Save current system software
5. Data import/Export
6. After you choose the updates
   Press [OK] button to confirm the update, press [EXIT] button to cancel the update.
7. You can also save your current software to your storage device.

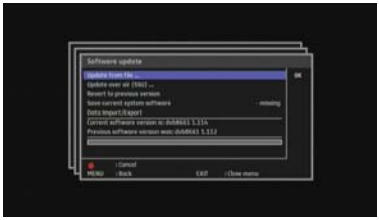

 © FTEmaximal

3.7.10. Restore factory settings…

When you press [OK] on the "restore factory settings" item:
If you press [OK] then all changes you made will be reset to default values.
Press [Exit] to abort the restoring.

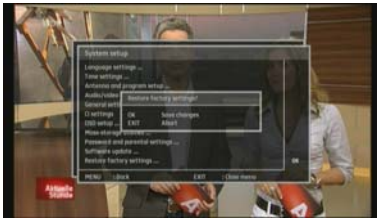

3.8. Information

When you select the "Information" menu you will see a screen like beside. The screen displays information about the current channel. Including satellite, software version, CI slot, service and storage device information.

In "Show stream information" menu, press [OK] button to enter the menu, you can see some related Stream information from the picture.
Press [Exit] button to leave the information display.

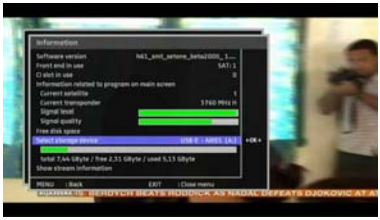



 © FTEmaximal

4. Technical Specification

VIDEO	
Decoding	MPEG-4 & MPEG-2 & MEPG-1 compatible
Bit rate	Max. 90Mbit/s
Output	PAL/NTSC
Aspect ratio	4:3, 16:9, Letterbox
Active pixel (SCART)	480i/576i
Active pixel (HDMI)	480i / 576i / 720p / 1080i / 1080p
Output connector	HDMI / Scart / RCA

AUDIO	
Decoding	MPEG / Dolby Digital / Dolby Digital +
Mode	Mono / Left / Right / Stereo
Bit rate	Max. 384kbps
Output connector	HDMI, Scart, RCA, Optical SPDIF

DEMODULATOR	
Demodulation	QPSK / 8PSK / 16PSK
Symbol rate	SCPC / MCPC
Outer code	RS (204, 188, 8)
Inner code	ALL DVB rates
Energy dispersion	DVB-S & DVB-S2 recommendation

INPUT SIGNAL	
Frequency	950MHz ~ 2150MHz
Input level	-65dBm ~ -25dBm
Channel bandwidth	36MHz
Input socked	F-type connector

LNB CONTROL	
Power supply	13/18V (500mA max) with short circuit protection
Polarized control	13/18Vpolarization (vertical/horizontal)
DiseqC control	DiSEqC1.0, DiSEqC1.1 and DiSEqC1.2

MISCELLANEOUS	
USB Connector	USB 2.0
Common Interface	1XCI+
Media formats (*available with hard disk connected to USB 2.0 port)	Image: .JPG, .BMP, .PNG Audio: .MP3 Record: .TS *
Supply voltage	175~230VAC, 50~60Hz
Power consumption	Max. 30 watts
Standby consumption	<1 Watts
Operation temperature	0° to +40°
Storage temperature	-20° to +70°
Dimensions (WxDxH)	280x245x55 mm
Weight	1,3 Kg

**** This function will only be available in models with PVR ready functionability.***

 © FTEmaximal

5. Conformity declaration

CONFORMITY DECLARATION

"WE , FTE MAXIMAL, DECLARE THAT THE PRODUCT
MAX S700 CI+
IS IN CONFORMITY WITH FOLLOWING DIRECTIVES
Low Voltage Directive 2006/95/EC
EMC Directive 2004/108/EC"

If you wish a copy of the conformity declaration, please contact the company

 © FTEmaximal



ESPAÑA
Mogoda, 110
Pol. Industrial Can Salvatella
08210 Barberà del Vallès
(Barcelona) España
Tel. 00 34 93 729 27 00
Fax. 00 34 93 729 30 73
ftemaximal@ftemaximal.com
www.ftemaximal.com

FRANCE
16 ZAE Les Mouilles
74570 Groisy
Tel. 00 33 450 68 80 17
Fax. 00 33 450 68 84 68
sav@ftemaximal.fr
www.ftemaximal.com

ITALIA
Via Edison, 29
42040 Calerno di
Sant'Ilario d'Enza (RE)
Tel. 00 39 05 22 90 97 01
Fax. 00 39 05 22 90 97 48
fte@fte.it
www.ftemaximal.com

DEUTSCHLAND
BCN Distribuciones S.A. Unipersonal
Niederlassung Deutschland
Auf der Höhe, 8
44536 Lünen
Deutschland
Tel. 00 49 (0) 23 18 78 5 - 01
Fax. 00 49 (0) 23 18 78 5 - 200
info@ftemaximal.de
www.ftemaximal.de

PORTUGAL
Rua José Carlos Ary dos Santos
A-das-Lebres (Loures)
2670-791 Santo Antão do Tojal
Tel. 00 351 219 83 87 00
Fax. 00 351 219 83 87 09
ftemaximal@ftemaximal.pt
www.ftemaximal.com

UNITED ARAB EMIRATES
P.O.Box 262442
Jebel Ali Free Zone
Warehouse FZS5AB03
Dubai
Tel. 00 971 4 886 5700
Fax. 00 971 4 886 5701
www.ftemaximal.ae